

Operating Instruction Manual

UHD LCD MONITOR








Table of contents

| | |
|---|------|
| Safety Symbols & Precautions----- | 2~4 |
| Accessories----- | 5 |
| Installation----- | 5 |
| Controls & Functions----- | 6 |
| Remote control (optional)----- | 7 |
| OSD setup under HDMI & DP input mode----- | 7~15 |
| Care and Cleaning----- | 16 |
| Mounting Your MONITOR to the Wall----- | 16 |
| Warranty----- | 17 |

Safety Symbols & Precautions

Safety Symbols

| | |
|---|---|
|  | WARNING Failure to abide by the information in a WARNING may result in serious injury and can be life threatening. |
|  | CAUTION Failure to abide by the information in a CAUTION may result in moderate injury and/or property or product damage. |
|  | Alert electrical hazard. |
|  | Indicates a prohibited action. |
|  | Indicates to ground for safety. |

This manual uses below safety symbols. They denote critical information. Please read them carefully.

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The design of this apparatus is safe to patient. We will try the best to assure the newest information be shown in this manual, but the information in this document is subject to change without prior notice.

Precautions

To ensure personal safety and proper maintenance, please read this section and the caution statements on the unit.

WARNING

If the unit begins to emit smoke, smells like something is burning, or makes strange noises, disconnect all power connections immediately and contact your dealer for advice.

Attempting to use a malfunctioning unit may result in fire, electric shock, or equipment damage.

Do not open the cabinet or modify the unit.

Opening the cabinet or modifying the unit may result in fire, electric shock, or burn.




Refer all servicing to qualified service personnel.

Do not attempt to service this product yourself as opening or removing covers may result in fire, electric shock, or equipment damage.

Keep small objects or liquids away from the unit.

Small objects accidentally falling through the ventilation slots into the cabinet or spillage into the cabinet may result in fire, electric shock, or equipment damage. If an object or liquid falls/spills into the cabinet, unplug the unit immediately. Have the unit checked by a qualified service engineer before using it again.

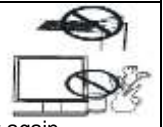

Set up the unit in an appropriate location.

Not doing so may result in fire, electric shock, or equipment damage.

- Do not place the unit outdoors.
- Do not install the unit in transportation systems (ship, aircraft, trains, automobiles, etc.)
- Do not place the unit in a dusty or humid environment.
- Do not place the unit in a location where the steam comes directly on the screen.
- Do not place the unit near heat generating devices or a humidifier.
- Do not place the unit in an inflammable gas environment.



To avoid danger of suffocation, keep the plastic packing bags away from babies and children.



Use the enclosed power cord and connect to the standard power outlet of your country.

Be sure to remain within the rated voltage of the power cord. Not doing so may result in fire or electric shock.

To disconnect the power cord, grasp the plug firmly and pull.

Tugging on the cord may damage and result in fire or electric shock.



The equipment must be connected to a grounded main outlet.

Not doing so may result in fire or electric shock.



Use the correct voltage.

- The unit is designed for use with a specific voltage only. Connection to another voltage than specified in this User's Manual may cause fire, electric shock, or equipment damage.
- Do not overload your power circuit, as this may result in fire or electric shock.

Handle the power cord with care.

- Do not put the power cord under the unit or other heavy object.
- Do not pull up or twist the power cord.



If the power cord is broken, stop to use it immediately. Using broken power cord may result in fire or electric shock.

Never touch the plug and power cord if it begins to thunder.

Touching them may result in electric shock.



Do not touch a damaged LCD panel directly with bare hands.

The liquid crystal that may leak from the panel is poisonous if it enters the eyes or mouth. If any part of the skin or body comes in direct contact with the panel, please wash thoroughly. If some physical symptoms result, please consult your doctor.




CAUTION

Handle with care when carrying the unit.

Disconnect the power cord and signal cables and remove the optional unit. Moving the unit with the cord or the option attached is dangerous. It may result in injury.

When handling the unit, grip the bottom of the unit firmly with both hands ensuring the panel faces outward before lifting.

Dropping the unit may result in injury or equipment damage.

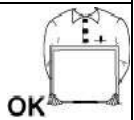

Do not block the ventilation slots on the cabinet.

- Do not place any objects on the ventilation slots.
- Do not install the unit in a closed space.
- Do not use the unit laid down or upside down.



Blocking the ventilation slots prevents proper airflow and may result in fire, electric shock, or equipment damage.

Do not touch the plug with wet hands.

Doing so may result in electric shock.



Periodically clean the area around the plug.

Dust, water, or oil on the plug may result in fire.

Unplug the unit before cleaning it.

Cleaning the unit while it is plugged into a power outlet may result in electric shock.

If you plan to leave the unit unused for an extended period, disconnect the power cord from the wall socket after turning off the power switch for the safety and the power conservation.


Accessories

Please check the following listed accessories before installation:

| | | | | | |
|----------|----|-------------|----|-------------|----|
| AC cable | X1 | HDMI cable | X1 | User Manual | X1 |
| Adapter | X1 | LCD Monitor | X1 | | |

Installation

1. Rear Interface

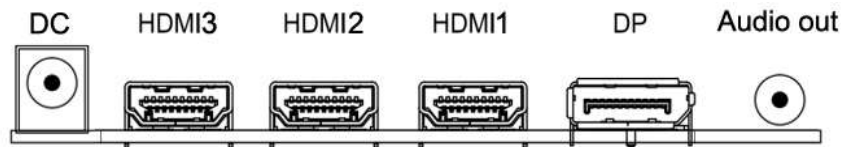

Explanation of connectors

DC: power supply 12V 5A

HDMI (1/2/3): Lets you connect a device, such as a digital cable box, with an HDMI or a DVI output. HDMI (High Definition Multimedia Interface) Provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable. Since HDMI technology is based on Digital Visual Interface (DVI), the jack on the back of your MONITOR is also compatible with DVI devices. HDMI Input lets you connect a device, such as a digital cable box, with an HDMI output. HDMI1[2.0 & downwards]; HDMI2&3[1.4 & downwards]

DP: Connect a video output device with DP. Computer / Notebook.

AUDIO OUT: Connect external 3.5mm headphones or active speakers

Controls & Functions

Buttons on the lower-right part of the back cover

You can use the buttons of your monitor to operate many of the monitor's features.



Indicator LED on the lower-right part of the panel: In red when standby mode, in green when display.

HOW to use buttons

Use the buttons on the right side control panel to adjust the OSD

1. Turn on / off the monitor
2. **EXIT:** VIDEO source switching or Exit Main/Sub menu
3. **MENU:** Display the main menu or enter the sub-menu or confirm adjust.
4. **UP:** Cursor up or increase the value when OSD appears.
5. **DOWN:** Cursor down or reduce the value when OSD appears.

Remote control (OPTIONAL)



| | |
|-----------|---|
| POWER | Turn on & off the monitor |
| MENU | Display the main menu or confirm adjust |
| VIDEO/UP | VIDEO Source switching / Cursor up when OSD appears |
| MODE/DWON | MODE no effect / Cursor down when OSD appears |
| LEFT | Exit the sub/main-menu or to reduce the value |
| RIGHT | Enter the sub-menu or to increase the value |

OSD setup

OSD setup under HDMI & DP input mode

| | |
|---------------|--|
| Menu | |
| | <p>Input Source: The monitor will automatically Display the channel that with signal feed in.</p> |
| Remark | |

| | |
|---------------|--|
| Menu | |
| | <p>Brightness/Contrast: Brightness: Set the image brightness (0-100) Contrast: Set the image Contrast (0-100) DCR: Set the dynamic contrast ratio (on / off)</p> <p>The Brightness is adjust backlight luminous intensity</p> |
| Remark | |

| Menu | <table border="1"> <thead> <tr> <th colspan="2">HDMI2</th> <th>Resolution:3840x2160@30Hz</th> </tr> </thead> <tbody> <tr> <td>Input Source</td> <td>Gamma</td> <td>2.2</td> </tr> <tr> <td>Brightness/Contrast</td> <td>Picture Mode</td> <td>Standard</td> </tr> <tr> <td colspan="2">Color Setting</td> <td>Color Temperature</td> </tr> <tr> <td>Picture Quality Setting</td> <td>Hue</td> <td>50</td> </tr> <tr> <td>Display</td> <td>Saturation</td> <td>50</td> </tr> <tr> <td>Audio</td> <td>Low Blue Light</td> <td>0</td> </tr> <tr> <td>Multi-Window</td> <td></td> <td></td> </tr> <tr> <td>OSD</td> <td></td> <td></td> </tr> <tr> <td>Other</td> <td></td> <td></td> </tr> <tr> <td></td> <td>Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz</td> <td>Window2: InputSource: Resolution:</td> </tr> <tr> <td></td> <td>Window3: InputSource: Resolution:</td> <td>Window4: InputSource: Resolution:</td> </tr> </tbody> </table> | HDMI2 | | Resolution:3840x2160@30Hz | Input Source | Gamma | 2.2 | Brightness/Contrast | Picture Mode | Standard | Color Setting | | Color Temperature | Picture Quality Setting | Hue | 50 | Display | Saturation | 50 | Audio | Low Blue Light | 0 | Multi-Window | | | OSD | | | Other | | | | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz | Window2: InputSource: Resolution: | | Window3: InputSource: Resolution: | Window4: InputSource: Resolution: |
|-------------------------|---|---|---------------------------|---------------------------|--------------|-------|-----|---------------------|--------------|----------|----------------------|--|-------------------|-------------------------|-----|----|---------|------------|----|-------|----------------|---|--------------|--|--|-----|--|--|-------|--|--|--|--|---|--|---|---|
| | HDMI2 | | Resolution:3840x2160@30Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input Source | Gamma | 2.2 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Brightness/Contrast | Picture Mode | Standard | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Color Setting | | Color Temperature | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Picture Quality Setting | Hue | 50 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Display | Saturation | 50 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Audio | Low Blue Light | 0 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Multi-Window | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OSD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Other | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz | Window2: InputSource: Resolution: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Window3: InputSource: Resolution: | Window4: InputSource: Resolution: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Remark | <p>Color Set:</p> <p>Gamma: Set the image gamma (1.8, 2.0, 2.2, 2.4, 2.6)</p> <p>Picture Mode: Set the image mode (Standard, photo, movie, game)</p> <p>Color Temperature: Set the color temperature (Normal, warm, cool, user)</p> <p>Hue: Set the image hue (0-100)</p> <p>Saturation: Set the image Saturation(0-100)</p> <p>Low Blue Light: Set the low blue light(0-100)</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |


| Menu | <table border="1"> <thead> <tr> <th colspan="2">HDMI2</th> <th>Resolution:3840x2160@30Hz</th> </tr> </thead> <tbody> <tr> <td>Input Source</td> <td>Sharpness</td> <td>50</td> </tr> <tr> <td>Brightness/Contrast</td> <td>Response Time</td> <td>Off</td> </tr> <tr> <td>Color Setting</td> <td>Noise Reduction</td> <td>Off</td> </tr> <tr> <td colspan="2">Picture Quality Setting</td> <td>Super Reduction</td> </tr> <tr> <td>Display</td> <td>Dynamic Luminous Contrc</td> <td>Off</td> </tr> <tr> <td>Audio</td> <td>Blacklevel</td> <td>50</td> </tr> <tr> <td>Multi-Window</td> <td></td> <td></td> </tr> <tr> <td>OSD</td> <td></td> <td></td> </tr> <tr> <td>Other</td> <td></td> <td></td> </tr> <tr> <td></td> <td>Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz</td> <td>Window2: InputSource: Resolution:</td> </tr> <tr> <td></td> <td>Window3: InputSource: Resolution:</td> <td>Window4: InputSource: Resolution:</td> </tr> </tbody> </table> | HDMI2 | | Resolution:3840x2160@30Hz | Input Source | Sharpness | 50 | Brightness/Contrast | Response Time | Off | Color Setting | Noise Reduction | Off | Picture Quality Setting | | Super Reduction | Display | Dynamic Luminous Contrc | Off | Audio | Blacklevel | 50 | Multi-Window | | | OSD | | | Other | | | | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz | Window2: InputSource: Resolution: | | Window3: InputSource: Resolution: | Window4: InputSource: Resolution: |
|--------------------------------|--|---|---------------------------|---------------------------|--------------|-----------|----|---------------------|---------------|-----|---------------|-----------------|-----|--------------------------------|--|-----------------|---------|-------------------------|-----|-------|------------|----|--------------|--|--|-----|--|--|-------|--|--|--|--|---|--|---|---|
| | HDMI2 | | Resolution:3840x2160@30Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input Source | Sharpness | 50 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Brightness/Contrast | Response Time | Off | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Color Setting | Noise Reduction | Off | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Picture Quality Setting | | Super Reduction | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Display | Dynamic Luminous Contrc | Off | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Audio | Blacklevel | 50 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Multi-Window | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OSD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Other | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz | Window2: InputSource: Resolution: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Window3: InputSource: Resolution: | Window4: InputSource: Resolution: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Remark | <p>Picture Quality Set:</p> <p>Sharpness: Set the picture sharpness (0-100)</p> <p>Response Time: Set the picture response time (off, high, middle, low)</p> <p>Noise Reduction: Set the picture noise reduction (off, high, middle, low)</p> <p>Super Resolution: Set the picture super resolution (off, high, middle, low)</p> <p>Dynamic Luminous Control: Set the picture dynamic luminous (on / off)</p> <p>Blacklevel: Set image background brightness (0-100)</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------------------------|--|--|----------------------------------|----------------------------------|--------------|--------------|-------------|---------------------|--|--|---------------|--|--|-------------------------|--|--|----------------|--|--|-------|--|--|--------------|--|--|-----|--|--|-------|--|--|--|---|--|
| Menu | <table border="1"> <tr> <td colspan="2">HDMI2</td> <td>Resolution:3840x2160@30Hz</td> </tr> <tr> <td>Input Source</td> <td>Aspect Ratio</td> <td>Wide Screen</td> </tr> <tr> <td>Brightness/Contrast</td> <td></td> <td></td> </tr> <tr> <td>Color Setting</td> <td></td> <td></td> </tr> <tr> <td>Picture Quality Setting</td> <td></td> <td></td> </tr> <tr> <td>Display</td> <td></td> <td></td> </tr> <tr> <td>Audio</td> <td></td> <td></td> </tr> <tr> <td>Multi-Window</td> <td></td> <td></td> </tr> <tr> <td>OSD</td> <td></td> <td></td> </tr> <tr> <td>Other</td> <td></td> <td></td> </tr> <tr> <td></td> <td> Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz Window3: InputSource: Resolution: </td> <td> Window2: InputSource: Resolution: Window4: InputSource: Resolution: </td> </tr> </table> | HDMI2 | | Resolution:3840x2160@30Hz | Input Source | Aspect Ratio | Wide Screen | Brightness/Contrast | | | Color Setting | | | Picture Quality Setting | | | Display | | | Audio | | | Multi-Window | | | OSD | | | Other | | | | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz Window3: InputSource: Resolution: | Window2: InputSource: Resolution: Window4: InputSource: Resolution: |
| | HDMI2 | | Resolution:3840x2160@30Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input Source | Aspect Ratio | Wide Screen | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Brightness/Contrast | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Color Setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Picture Quality Setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Display | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Audio | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Multi-Window | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OSD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Other | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz Window3: InputSource: Resolution: | Window2: InputSource: Resolution: Window4: InputSource: Resolution: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Remark | <p>Display:</p> <p>Aspect Ratio: Screen aspect ratio Set (wide screen, 4:3, 1:1, auto)</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|-------------------------|--|--|----------------------------------|----------------------------------|--------------|------|-----|---------------------|--------|----|---------------|--|--|-------------------------|--|--|---------|--|--|--------------|--|--|--------------|--|--|-----|--|--|-------|--|--|--|---|--|
| Menu | <table border="1"> <tr> <td colspan="2">HDMI2</td> <td>Resolution:3840x2160@30Hz</td> </tr> <tr> <td>Input Source</td> <td>Mute</td> <td>Off</td> </tr> <tr> <td>Brightness/Contrast</td> <td>Volume</td> <td>50</td> </tr> <tr> <td>Color Setting</td> <td></td> <td></td> </tr> <tr> <td>Picture Quality Setting</td> <td></td> <td></td> </tr> <tr> <td>Display</td> <td></td> <td></td> </tr> <tr> <td>Audio</td> <td></td> <td></td> </tr> <tr> <td>Multi-Window</td> <td></td> <td></td> </tr> <tr> <td>OSD</td> <td></td> <td></td> </tr> <tr> <td>Other</td> <td></td> <td></td> </tr> <tr> <td></td> <td> Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz Window3: InputSource: Resolution: </td> <td> Window2: InputSource: Resolution: Window4: InputSource: Resolution: </td> </tr> </table> | HDMI2 | | Resolution:3840x2160@30Hz | Input Source | Mute | Off | Brightness/Contrast | Volume | 50 | Color Setting | | | Picture Quality Setting | | | Display | | | Audio | | | Multi-Window | | | OSD | | | Other | | | | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz Window3: InputSource: Resolution: | Window2: InputSource: Resolution: Window4: InputSource: Resolution: |
| | HDMI2 | | Resolution:3840x2160@30Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input Source | Mute | Off | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Brightness/Contrast | Volume | 50 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Color Setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Picture Quality Setting | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Display | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Audio | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Multi-Window | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OSD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Other | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz Window3: InputSource: Resolution: | Window2: InputSource: Resolution: Window4: InputSource: Resolution: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Remark | <p>Audio:</p> <p>Mute: Mute the audio output to the earphone (on / off) Volume: Set the audio output volume to the earphone (0-100)</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Menu | <table border="1"> <thead> <tr> <th colspan="2">HDMI2</th> <th>Resolution:3840x2160@30Hz</th> </tr> </thead> <tbody> <tr> <td>Input Source</td> <td>Multi-Window</td> <td>Off</td> </tr> <tr> <td>Brightness/Contrast</td> <td>Sub Win2 Input</td> <td>HDMI2[1.4]</td> </tr> <tr> <td>Color Setting</td> <td>Sub Win3 Input</td> <td>HDMI3[1.4]</td> </tr> <tr> <td>Picture Quality Setting</td> <td>Sub Win4 Input</td> <td>DP</td> </tr> <tr> <td>Display</td> <td>PIP Size</td> <td>Medium</td> </tr> <tr> <td>Audio</td> <td>PIP Position</td> <td>TopRight</td> </tr> <tr> <td>Multi-Window</td> <td>Swap</td> <td></td> </tr> <tr> <td>OSD</td> <td></td> <td></td> </tr> <tr> <td>Other</td> <td></td> <td></td> </tr> <tr> <td></td> <td>Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz</td> <td>Window2: InputSource: Resolution:</td> </tr> <tr> <td></td> <td>Window3: InputSource: Resolution:</td> <td>Window4: InputSource: Resolution:</td> </tr> </tbody> </table> | HDMI2 | | Resolution:3840x2160@30Hz | Input Source | Multi-Window | Off | Brightness/Contrast | Sub Win2 Input | HDMI2[1.4] | Color Setting | Sub Win3 Input | HDMI3[1.4] | Picture Quality Setting | Sub Win4 Input | DP | Display | PIP Size | Medium | Audio | PIP Position | TopRight | Multi-Window | Swap | | OSD | | | Other | | | | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz | Window2: InputSource: Resolution: | | Window3: InputSource: Resolution: | Window4: InputSource: Resolution: |
|-------------------------|---|---|---------------------------|---------------------------|--------------|--------------|-----|---------------------|----------------|------------|---------------|----------------|------------|-------------------------|----------------|----|---------|----------|--------|-------|--------------|----------|---------------------|------|--|-----|--|--|-------|--|--|--|--|---|--|---|---|
| | HDMI2 | | Resolution:3840x2160@30Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input Source | Multi-Window | Off | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Brightness/Contrast | Sub Win2 Input | HDMI2[1.4] | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Color Setting | Sub Win3 Input | HDMI3[1.4] | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Picture Quality Setting | Sub Win4 Input | DP | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Display | PIP Size | Medium | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Audio | PIP Position | TopRight | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Multi-Window | Swap | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OSD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Other | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz | Window2: InputSource: Resolution: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Window3: InputSource: Resolution: | Window4: InputSource: Resolution: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Remark | <p>Multi-Window: (OPTIONAL)</p> <p>Multi-Window: Set the screen multi-window (off, PIP mode, PBP 2win, PBP 3Win, PBP 4Win)</p> <p>Sub Win2 Input: Set the sub win2 input (HDMI2[1.4])</p> <p>Sub Win3 Input: Set the sub win3 input (HDMI3[1.4])</p> <p>Sub Win4 Input: Set the sub win4 DP</p> <p>PIP Size: Set the PIP picture size (small, medium, large)</p> <p>PIP Position: Set the PIP sub window position (top right, top left, bottom right, bottom left)</p> <p>Swap: Switch the main window with the sub window</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

| Menu | <table border="1"> <thead> <tr> <th colspan="2">HDMI2</th> <th>Resolution:3840x2160@30Hz</th> </tr> </thead> <tbody> <tr> <td>Input Source</td> <td>Language</td> <td>English</td> </tr> <tr> <td>Brightness/Contrast</td> <td>OSD H-Position</td> <td>50</td> </tr> <tr> <td>Color Setting</td> <td>OSD V-Position</td> <td>50</td> </tr> <tr> <td>Picture Quality Setting</td> <td>OSD Transparency</td> <td>20</td> </tr> <tr> <td>Display</td> <td>OSD Time Out</td> <td>20</td> </tr> <tr> <td>Audio</td> <td>OSD Rotation</td> <td>Normal</td> </tr> <tr> <td>Multi-Window</td> <td></td> <td></td> </tr> <tr> <td>OSD</td> <td></td> <td></td> </tr> <tr> <td>Other</td> <td></td> <td></td> </tr> <tr> <td></td> <td>Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz</td> <td>Window2: InputSource: Resolution:</td> </tr> <tr> <td></td> <td>Window3: InputSource: Resolution:</td> <td>Window4: InputSource: Resolution:</td> </tr> </tbody> </table> | HDMI2 | | Resolution:3840x2160@30Hz | Input Source | Language | English | Brightness/Contrast | OSD H-Position | 50 | Color Setting | OSD V-Position | 50 | Picture Quality Setting | OSD Transparency | 20 | Display | OSD Time Out | 20 | Audio | OSD Rotation | Normal | Multi-Window | | | OSD | | | Other | | | | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz | Window2: InputSource: Resolution: | | Window3: InputSource: Resolution: | Window4: InputSource: Resolution: |
|-------------------------|---|---|---------------------------|---------------------------|--------------|----------|---------|---------------------|----------------|----|---------------|----------------|----|-------------------------|------------------|----|---------|--------------|----|-------|--------------|--------|--------------|--|--|------------|--|--|-------|--|--|--|--|---|--|---|---|
| | HDMI2 | | Resolution:3840x2160@30Hz | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Input Source | Language | English | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Brightness/Contrast | OSD H-Position | 50 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Color Setting | OSD V-Position | 50 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Picture Quality Setting | OSD Transparency | 20 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Display | OSD Time Out | 20 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Audio | OSD Rotation | Normal | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Multi-Window | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| OSD | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Other | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Window1: InputSource: HDMI2 Resolution: 3840x2160@30Hz | Window2: InputSource: Resolution: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| | Window3: InputSource: Resolution: | Window4: InputSource: Resolution: | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Remark | <p>OSD:</p> <p>Language: OSD language selection (English, Chinese, Korean, Russian, Spanish, Japanese, French)</p> <p>OSD H-Position: Change OSD horizontal position adjustment (0-100)</p> <p>OSD V-Position: Change OSD vertical position adjustment (0-100)</p> <p>OSD Transparency: OSD transparency adjustment (0-100)</p> <p>OSD Time Out: OSD display dwell time selection (0-100 seconds)</p> <p>OSD Rotation: OSD rotation adjustment (Normal, 90, 180, 270)</p> | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
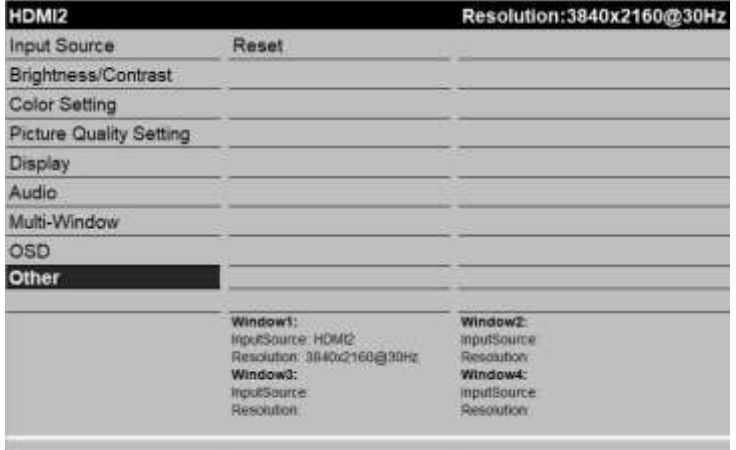
| | |
|--|--|
| <p style="text-align: center;">Menu</p> |  |
| <p style="text-align: center;">Remark</p> | <p>Other:</p> <p>Reset: Reset the monitor to default factory setting.</p> |

Care and Cleaning

CAUTION: Turn off your MONITOR before cleaning.

You can clean the MONITOR as required, using a soft lint-free cloth. Be sure to occasionally dust the ventilation slots in the cabinet to help assure adequate ventilation.

The Monitor's screen may be cleaned with a soft, lint-free cloth as well. Take care not to scratch or mar the screen. If necessary, you may use a cloth dampened with warm water. While cleaning do not spray liquid directly on the screen, or allow liquid to run down the screen and inside the Monitor. Also, never place drinks or vases with water on top of the monitor. This could increase the risk of fire or shock hazard or damage to the monitor.

Mounting Your MONITOR to the Wall

Caution: The wall mount must bear a minimum of five times The monitor's net weight without causing damage. To mount your MONITOR to the wall you need to purchase a VESA wall mount. For models 15inch. 17inch . 19inch.20inch, purchase a VESA 100 x 100, KM4x 8mm (100 x 100, for example, means the mounting measurements are 100mm horizontally and 100mm vertically; M4 x 8 mm is the type screw that needs to be used).

1. You need to remove the base first before attaching the wall mount.
 - A. Place the MONITOR face down on a surface that is soft, yet strong enough to hold the MONITOR.
 - B. Use a screwdriver to remove the screws from the four holes on each side of the bottom of the Monitor's base (only use with base)
2. Make sure all cables are already connected to the MONITOR.
3. Follow the directions included with the wall mount to mount the monitor to the wall.

TATUNG COMPANY OF AMERICA, INC.
LIMITED WARRANTY
COMMERCIAL DISPLAY MONITOR PRODUCT

Tatung Company of America, Inc. ("Tatung") warrant to you, the original commercial purchaser of this new Tatung product (the "product") that all parts of this Product will be free from defects in materials or workmanship, as hereinafter provided, for three years from the date of original purchase. Tatung will, at our option, repair or replace the product or any part thereof, which becomes defective, malfunctions or otherwise fails to conform with this warranty under normal use and service during the term of this warranty, at no charge to you for parts and labor. Repaired or Replacement product or parts may include remanufactured or refurbished parts and components. The repaired or replacement product will be covered by the balance of the duration remaining on the product's original limited warranty period.

You may obtain warranty service by contacting the Tatung Customer Support at (800) 827-2850 Ext. 242 to obtain a Return Authorization number (RMA).

You will be required to provide:

- A copy of the dated sales receipt from Tatung (Proof of Purchase).
- Your Name or Company Name
- The model number and serial number of the product.
- A description of the problem
- Your ship to address, email address, fax number and phone number.

Upon receipt of the RMA, you can bring or ship the Product at your expense, to the address provided with the RMA. Please make sure that the product is pack in a suitable carton with strength and size that will allow you to over pack to properly secure the product. Shipping insurance is recommended should you experience any transportation claim from the carrier you select. Tatung will not be responsible for any loss or damages as a result of shipping in product for service.

TATUNG SHALL NOT BE LIABLE FOR ANY LOSS OR DESTRUCTION OF DATA, MEDIA OR ANY CONTENT COMPONENT SUCH AS PHOTOS,

FEEDS, TEMPLATES, ETC. . FROM THE USE OR SERVICE OF THIS PRODUCT, WHETHER DUE TO ANY ISSUES OR FAILURE TO SECURE ALL PROGRAMS AND DATA CONTAINED IN OR AFFECTED BY THE PRODUCT OR TO MAINTAIN THE CONFIDENTIALITY OF DATA STORED ON THE PRODUCT.

This warranty does not cover:

1. Defects, malfunction or failures resulting from causes beyond the control of Tatung or the manufacturer of the Product, including, but not limited to, shipping or transit accident, abuse, misuse operation contrary to furnished instructions, improper or insufficient ventilation, operations with incorrect power supplies, operation with faulty associated equipment, modification, alteration, improper servicing, acts of God, tampering or normal wear and tear;
2. Cosmetic damage, such as scratch, plastic discoloration, etc. to the exterior finish during the warranty period;
3. Burned-in images (screen burn) resulting from viewing of image on the display screen for an extended period of time;
4. Display problems or reception interference and distortion related to echo, interference, noise or other signal transmission and delivery/reception problems;
5. Minor display imperfections within the product's design specifications or that do not materially alter functionality.
6. Any reimbursement cost for removal, installation and set-up, including wall-mounting of product.
7. Products on which the serial number has been altered, defaced or removed; and
8. Products purchased outside of the United States.

Should any Product submitted for warranty service be found ineligible for warranty service, we will provide you with an estimate of cost of repair and will repair the product upon your request and upon receipt of payment or acceptable arrangements for payment.

THE DURATION OF ANY IMPLIED WARRANTIES WHICH MAY BE APPLICABLE TO THE PRODUCT, INCLUDING, BUT NOT LIMITED TO, THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A

PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS WRITTEN WARRANTY. NEITHER TATUNG NOR ITS SERVICE PROVIDER SHALL BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. SO THE ABOVE LIMITATIONS OR EXCLUSION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This is the only express warranty applicable to the Product; Tatung neither assumes nor authorizes anyone to assume for it any other express warranty.